



AT-IS230-10GP Layer 2 Switch Version 1.1.1 Software Release Notes

Please read this document before using the management software. The document has the following sections:

- “Supported Platforms,” next
- “New Features” on page 1
- “Enhanced Features” on page 2
- “Resolved Issues” on page 2
- “Known Issues” on page 2
- “Product Documentation” on page 2
- “Contacting Allied Telesis” on page 3

Note:

The firmware passed the testing program for Global Availability and is approved for use in live or production environments.

Supported Platforms

Version 1.1.1 management software is supported on the AT-IS230-10GP Switch. For upgrade instructions, refer to the AT-IS230-10GP Switch Web User Guide or AT-IS230-10GP Switch Reference Guide.

New Features

Version 1.1.1

- CPU/memory usage rate monitor commands
- Core-dump debug tool

Version 1.1.0

- Ethernet Connectivity Fault Management (CFM)
- Ethernet Protection Switched Ring (EPSR) transit mode
- Ethernet Ring Protection Switching (ERPS) V2 - ITU-T G.8032
- Remote authentication with RADIUS or TACACS
- Hardware Access Control Lists (ACL)
- IP Source Guard

- ❑ Dynamic Host Configuration Protocol (DHCP) Snooping
- ❑ Address Resolution Protocol (ARP) Spoofing

Enhanced Features

Version 1.1.1

None.

Version 1.1.0

- ❑ Fine-tuned the bucket size of egress rate limit (included in v1.0.1.00)

Version 1.0.1

- ❑ Improved packet scheduler architecture, which manages egress port/traffic class bandwidth.

Resolved Issues

Version 1.1.1

- ❑ PoE Legacy Mode could not be enabled.
- ❑ The switch disabled Denial of Service defenses when rebooted or power cycled.
- ❑ The switch did not properly configure its log settings after it was rebooted or power cycled.
- ❑ SNMP packets with the “Get-Request with ID=0” header caused memory leaks.
- ❑ Selected OIDs failed to work properly with LLDP-MIB.

Known Issues

None.

Product Documentation

- ❑ *IS230-10GP User Guide*
Instructions on managing the switch and configuration utility.
 - ❑ *IS230-10GP Reference Guide*
Descriptions of the basic features of the command line user interface, the commands associated with each feature, and command examples.
 - ❑ *IS Series Installation Guide*
Hardware installation instructions.
 - ❑ *IS230 Series Data Sheet*
General product information for the IS230 Series industrial managed Layer 2 switches.
- The documents are available from the Allied Telesis web site at www.alliedtelesis.com.

Contacting Allied Telesis

If you need assistance with this product, you may contact Allied Telesis technical support by going to the Services & Support section of the Allied Telesis web site at www.alliedtelesis.com/support. You can find links for the following services on this page:

- Helpdesk (Support Portal) - Log onto Allied Telesis interactive support center to search for answers to your questions in our knowledge database, check support tickets, learn about Return Merchandise Authorizations (RMAs), and contact Allied Telesis technical experts.
- Software Downloads - Download the latest software releases for your product.
- Licensing - Register and obtain your License key to activate your product.
- Product Documents - View the most recent installation guides, user guides, software release notes, white papers and data sheets for your product.
- Warranty - View a list of products to see if Allied Telesis warranty applies to the product you purchased and register your warranty.
- Allied Telesis Helpdesk - Contact a support representative.

To contact a sales representative or find Allied Telesis office locations, go to www.alliedtelesis.com/contact.

Copyright 2021 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis and the Allied Telesis logo are trademarks of Allied Telesis, Incorporated. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.